

WASHER DRYER CONTROLS AND OPERATION

The controls for the washer dryer are in Portuguese so here's a quick guide in English.



DRYER OPERATION

- Open the door by pressing the PORTA button on the right. It's not electronic so you'll need to push it in.
- Place your items in the dryer and shut the door.
- Turn the function knob to SECAR (in blue), after a few seconds the readout will show 0000.
- Press the SECUR BUTTON (4th from the left in blue) twice for 20 minutes and once more for each extra 10 minutes. The machine will add 4 minutes for standing time.
- Then press the INICIO (start) button and you're off.
- When finished turn the main dial back to OFF (O at the top) and open the door.

WASHER OPERATION

- Open the door by pressing the PORTA button on the right. It's not electronic so you'll need to push it in.
- Turn the main function LEFT to 40 for a 40 degree wash, or 30 if you prefer 30 degrees.
- The time will show just under 2 hours. If you press the RAPIDO button this will reduce to under an hour. We tried this and there is no difference in the wash quality so we always use this option.
- Then press the INICIO (start) button and you're off.
- When finished turn the main dial back to OFF (O at the top) and open the door.